

Mobile Phone
user manual

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.
Bluetooth ID : B014458

www.samsungmobile.com

Printed in Korea
Code No.:GH68-20468A
English (EU). 04/2009. Rev. 1.1

SAMSUNG



Safety precautions

Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury.

Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

Handle SIM cards and memory cards with care

- Do not remove a card while the phone is transferring or accessing information, as this could result in loss of data and/or damage to the card or phone.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

Ensure access to emergency services

Emergency calls from your phone may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

SAR information

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the European Union (EU) Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies.



Safety warnings

Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

Protect your hearing



Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Turn off the phone or disable the wireless functions when in an aircraft

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/ 113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Store the battery pack in a dry place.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and – terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phone in a fire. Follow all local regulations when disposing used batteries or phone.
- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research.

If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

Handle your phone carefully and sensibly

- Do not allow your phone to get wet—liquids can cause serious damage. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.
- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.
- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your phone, as paint can clog moving parts and prevent proper operation.
- Your phone and memory cards may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

Avoid interference with other electronic devices

Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

This EEE is compliant with RoHS.

Correct disposal of batteries in this product

(Applicable in the European Union and other European countries with separate battery return systems.)



This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

Turn off the phone in potentially explosive environments

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

Reduce the risk of repetitive motion injuries

 
When sending text messages or playing games on your phone, hold the phone with a relaxed grip, press the buttons lightly, use special features that reduce the number of buttons you have to press (such as templates and predictive text), and take frequent breaks.



Important usage information

Use your phone in the normal position

Avoid contact with your phone's internal antenna.



Internal antenna

Allow only qualified personnel to service your phone

Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

SAMSUNG
ELECTRONICS

SAMSUNG

Declaration of Conformity (R&TTE)

We, **Samsung Electronics**
declare under our sole responsibility that the product

GSM Mobile Phone : S3600

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950-1 : 2001+A11:2004
EMC	EN 301 489- 01 V1.5.1 (11-2004) EN 301 489- 07 V1.2.1 (08-2002) EN 301 489- 17 V1.2.1 (08-2002)
SAR	EN 50360 : 2001 EN 62209-1 : 2006
RADIO	EN 301 511 V9.0.2 (03-2003) EN 300 328 V1.7.1 (10-2006)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Balfour House, Churchfield Road,
Walton-on-Thames, Surrey, KT12 2TD, UK*
Identification mark: 0168

The technical documentation kept at :

Samsung Electronics QA Lab.

which will be made available upon request.
(Representative in the EU)

Samsung Electronics Euro QA Lab.
Blackbushe Business Park, Saxony Way,
Yateley, Hampshire, GU46 6GG, UK*


2008.09.17
(place and date of issue)

Yong-Sang Park / S. Manager
(name and signature of authorised person)

CE 0168

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.

 Phone layout

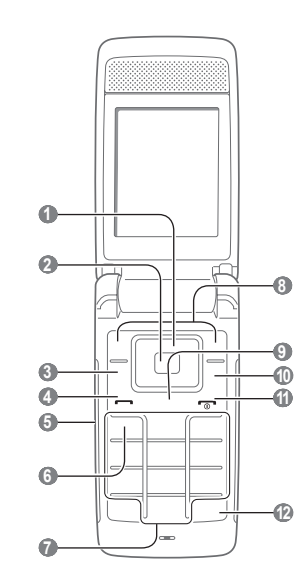

1

4-way navigation key
In Idle mode, access user-defined menus; In Menu mode, scroll through menu options

2

Web access/Confirm key
In Idle mode, access the web browser; In Menu mode, select the highlighted menu option or confirm an input

3

My Menu key
In Idle mode, access My Menu mode

4

Dial key
Make or answer a call; In Idle mode, retrieve recently dialed, missed, or received numbers

5

Volume key
Adjust the phone's volume; Send an SOS message
► Activate and send an SOS message

6

Voice mail service key
In Idle mode, access voice mails (press and hold)

7

Alphanumeric keys

8

Softkeys
Perform actions indicated at the bottom of the display

9

Delete key
Delete characters

10

Organiser key
In Idle mide, access organiser applications

11

Power/Menu exit key
Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode

12

Silent profile key
In Idle mode, activate or deactivate Silent profile (press and hold)


Your phone displays the following status indicators on the top of the screen:

Icon	Description
	Signal strength
	GPRS network connected
	EDGE network connected
	Call in progress
	Call diverting active
	SOS message feature activated
	Alarm activated
	Connecting to secured web page
	In Home Zone service area
	In Office Zone service area
	Bluetooth activated


Icon	Description
	New text message (SMS)
	New multimedia message (MMS)
	New email message
	New voice mail message
	Music playback in progress
	FM radio on
	Memory card inserted
	Normal profile activated
	Silent profile activated
	Battery power level

Install the SIM card and battery

 1. Remove the battery cover and insert the SIM card.

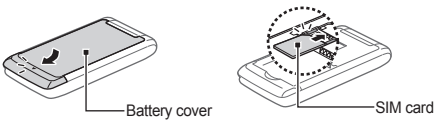


2. Insert the battery and replace the battery cover.




Charge the battery

 1. Plug the supplied travel adapter.



 2. When charging is finished, unplug the travel adapter.



Instructional icons

	Note: notes, usage tips, or additional information
	Followed by: the order of options or menus you must select to perform a step; for example: Press <Menu> → Messages (represents Menu, followed by Messages)
	Square brackets: phone keys; for example: [↶] (represents the Power/Menu exit key)
	Angled brackets: softkeys that control different functions at each screen; for example: <OK> (represents the OK softkey)

Turn your phone on or off

- To turn your phone on, press and hold [↶].
- To turn your phone off, press and hold [↶].

Make a call

- In Idle mode, enter an area code and a phone number.
- Press [↶] to dial the number.
- To end the call, press [↶].

Add a new contact

- In Idle mode, enter a phone number and press <Options>.
- Select **Save** → a memory location (phone or SIM) → **New**.
- Select a number type (if necessary).
- Enter contact information.
- Press [OK] or press <Options> → **Save** to add the contact to memory.

Send and view messages

- To send a text message
- In Idle mode, press <Menu> → Messages → **Create new message** → **Message**.
 - Enter a destination number and scroll down.
 - Enter the message text.
 - Press <Options> → **Send** to send the message.

- To view text messages
- In Idle mode, press <Menu> → Messages → **My messages** → **Inbox**.
 - Select a text message.

Answer a call

- When a call comes in, press [↶].
- To end the call, press [↶].

Adjust the volume

- To adjust the volume of the ringtone
- In Idle mode, press <Menu> → **Settings** → **Phone profiles**.
 - Scroll to the phone profile you are using.
 - Press <Options> → **Edit**.
 - Select **Call alert volume**.
 - Scroll left or right to adjust the volume level.
 - Press <Save> twice.

To adjust the volume of voice during a call

While a call is in progress, press [▲/▼] to adjust the earpiece volume.

Change your ringtone

- In Idle mode, press <Menu> → **Settings** → **Phone profiles**.
- Scroll to the phone profile you are using.
- Press <Option> → **Edit**.
- Select **Voice call ringtone**.
- Select a ringtone category → a ringtone.
- Press <Save>.

Activate the mobile tracker

This feature helps track your phone when it is stolen or when someone tries to use your phone using other SIM card, the phone will automatically send the preset tracking message to family or friends. This feature may be unavailable due to certain features supported by your service provider.

- In Idle mode, press <Menu> → **Settings** → **Security** → **Mobile tracker**
- Enter your password and press <OK>.
- Scroll left or right to **On**.
- Scroll down and press [OK] to open the recipient list.
- Press [OK] to open your contact list.
- Scroll to a contact and press [OK].
- Select a number (if necessary).
- When you are finished selecting contacts, press <Options> → **Select** to return to the recipient list.
- Press <Options> → **Save** to save the recipients.
- Scroll down and enter the sender's name.
- Press [OK] → <Accept>.

Call a recently dialled number

- In Idle mode, press [↶].
- Scroll left or right to select a call type.
- Scroll up or down to select a number or name.
- Press [OK] to view details of the call or [↶] to dial the number.

Enter text

- To change the text input mode
- Press and hold [*] to switch to an input mode. Depending on your region, you may be able to access an input mode for your specific language.
 - Press [*] to change case or switch to Number mode.
 - Press and hold [#] to switch to Symbol mode.
- T9 mode
- Press the appropriate alphanumeric keys to enter an entire word.
 - When the word displays correctly, press [#] to insert a space. If the correct word does not display, select an alternate word from the list that appears.

Activate and send an SOS message

In an emergency, you can send SOS messages to your family or friends for help.

- To activate the SOS message
- In Idle mode, press <Menu> → **Messages** → **SOS messages** → **Sending options**.
 - Scroll left or right to **On**.
 - Scroll down and press [OK] to open the recipient list.
 - Press [OK] to open your contact list.
 - Scroll to a contact and press [OK].
 - Select a number (if necessary).
 - When you are finished selecting contacts, press <Options> → **Select** to return to the recipient list.
 - Press <Options> → **Save** to save the recipients.
 - Scroll down and set the number of times to repeat the SOS message.
 - Press <Save> → <Yes>.
- To send an SOS message
- With the phone closed, press [▲/▼] four times to send an SOS message to preset numbers. The phone switches to SOS mode and sends the preset SOS message.
 - To exit SOS mode, press [↶].

Use the camera

- Capture photos
- In Idle mode, press the navigation key down.
 - Aim the lens at the subject and make any adjustments.
 - Press [OK] to take a photo.
 - Press <Back> to take another photo (step 2).

- View photos
- In Idle mode, press <Menu> → **My files** → **Images** → **My photos** → a photo file.

Listen to music

- In Idle mode, press <Menu> → **Music**.
- Select a music category → a music file.
- Control playback using the following keys:

Keys	Function
OK	Pause or resume playback
▲/▼	Adjust the volume up or down
Navigation	<ul style="list-style-type: none">Left: Restart playback; Skip backward (press within 3 seconds); Scan backward in a file (press and hold)Right: Skip forward; Scan forward in a file (press and hold)Up: Open the playlistDown: Stop playback